

ASSEMBLY INSTRUCTIONS

LG-D1203 CHAIR

T 3022-C


IMPORTANT NOTE:




 


Please read and follow the Assembly Instructions carefully.

- Identify and separate all parts before discarding packaging.
- Place wooden parts on clean soft surface to avoid scratching.
- Do not completely tighten screws until, after final assembly.
- Do not use a power tool for assembly.
- As with all assembled furniture, occasionally check to insure hardware is tight.

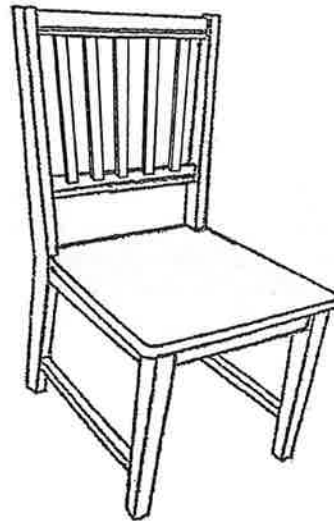TOOL REQUIRED (NOT PROVIDED) PHILIPS SCREWDRIVER

NO	PART LIST	QTY
1	CHAIR BACK	1PC
2	FRONT LEG	1PC
3	WOODEN SEAT	1PC
4	SIDE RAIL (L/R)	2PCS
6	SIDE LOWER RAIL (L/R)	2PCS



NO	HARDWARE LIST	QTY
A	JCBC BOLT M6 x 50mm 	4 PCS
B	SPRING WASHER M6 	4 PCS
C	FLAT WASHER M6 	4 PCS
D	CSK SCREW M4 x 32mm 	7 PCS
E	ALLEN KEY M4 	1PC
F	WOOD DOWEL M8 x 30mm 	16 PCS


Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware. Replacements for missing or damaged parts or hardware are normally shipped within 2 to 3 days.

We appreciate your business!


STEP 1

LOOSELY ATTACH (L/R) SIDE RAIL TO FRONT LEG USING BOLT (A) SPRING WASHER (B) AND FLAT WASHER (C).

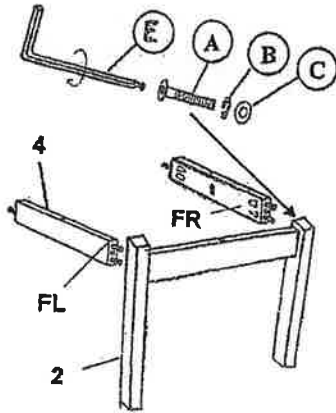


STEP 2

LAY CHAIR BACK OF FLAT SURFACE AND LOOSELY ATTACH (L/R) SIDE RAIL TO CHAIR BACK USING BOLT (A), SPRING WASHER (B) AND FLAT WASHER (C).

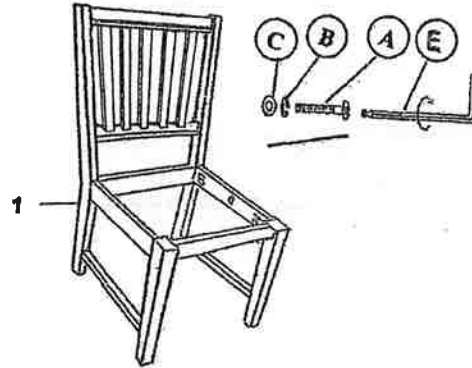


STEP 3

PLACE TWO STRETCHER(L/R) IN THE HOLES IN CHAIR BACK ALIGN AND FRAME UP CHAIR USING HAND PRESSURE TO GET STRETCHER(L/R) IN PLACE. COMPLETELY TIGHTEN ALL SCREWS.

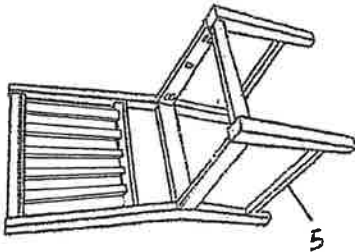

STEP 4

TURN STRETCHER(L/R) SO THE PREDRILLED HOLES FACE DOWNWARD AND SECURE USING 38mm SCREWS(D). ATTACH WOODEN SEAT USING 32mm SCREW(E).

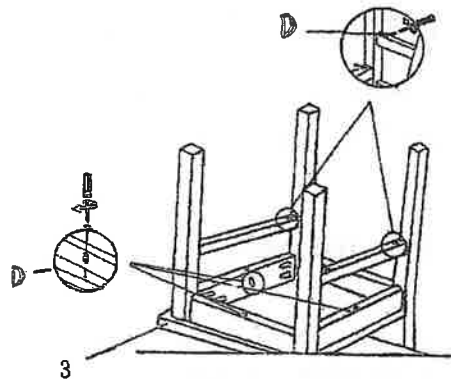


There are no pre-drilled holes to attach the seat





T 3022-T

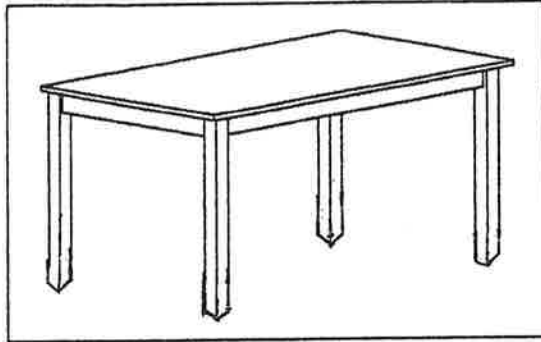ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product . Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment.
Place all parts on a clean and smooth surface such as rug or carpet to avoid the parts from being scratched .
Check to be sure that you have all parts and hardware before you start to assemble .



PART LIST		
1	TABLE TOP	1 PC
2	TABLE LEGS	4PCS


HARDWARE LIST		
A	 JCBC M6 X 60MM	8 PCS
B	 FLAT WASHER M6	8 PCS
C	 SPRING WASHER M6	8 PCS
D	 ALLEN KEY M4	1 PC

STEP 1

Turn the table top (1) upside down on a soft surface such as carpet that fix the table leg (2) to the corner of the apron by using flat washer (B) , spring washer (C) , JCBB (A) and tighten with allen key (D) as per illustration below .

STEP 2

Repeat the same process to fix the other three table legs .

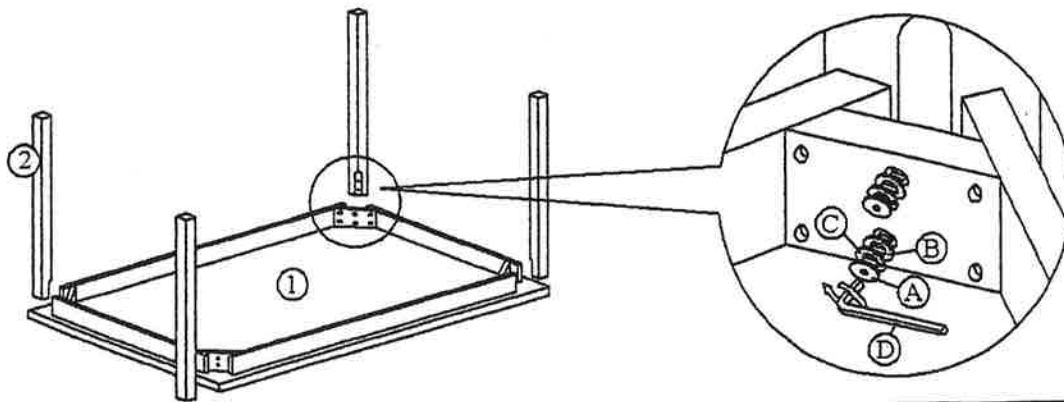

CARE AND MAINTENANCE

The touch of a soft cloth is all the maintenance your wood pieces will ever need .
Never use harsh chemicals or abrasive cleaners , as they could mark or destroy finish .
Note : Must tighten screws periodically . With use screws will become loose .
Check tightness of all screw every 6 to 8 weeks .