



ASSEMBLY INSTRUCTIONS


Note: Pls do not tighten all bolts until the chair is assembled completely

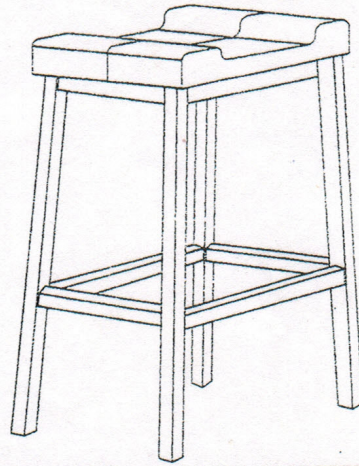


T 3221

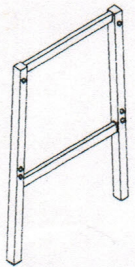


A\*4PCS



B\*4PCS

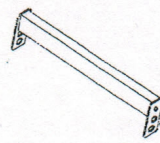

C\*4PCS



D\*2PCS

E\*24PCS





1/4"\*16MM

F\*8PCS



M5\*40MM

G\*1PCS

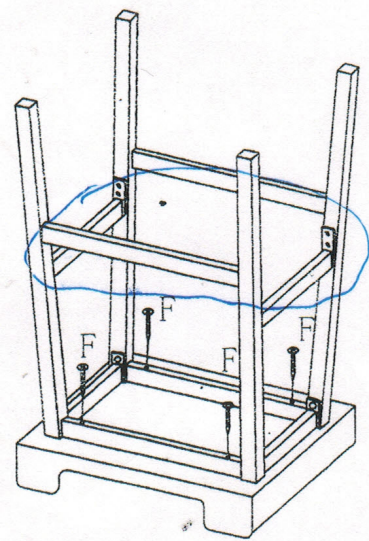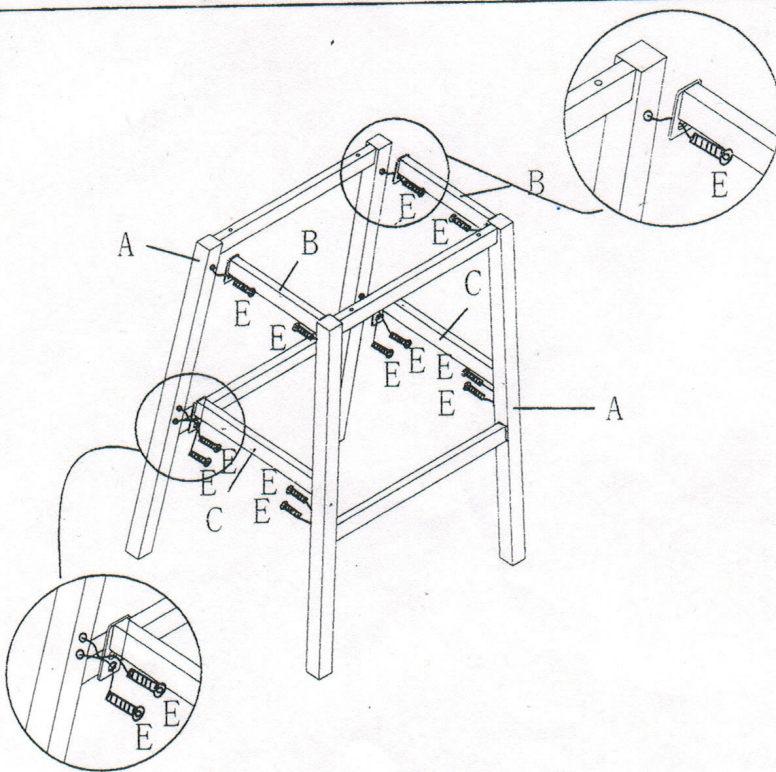

D