




T-2330


ASSEMBLY INSTRUCTIONS

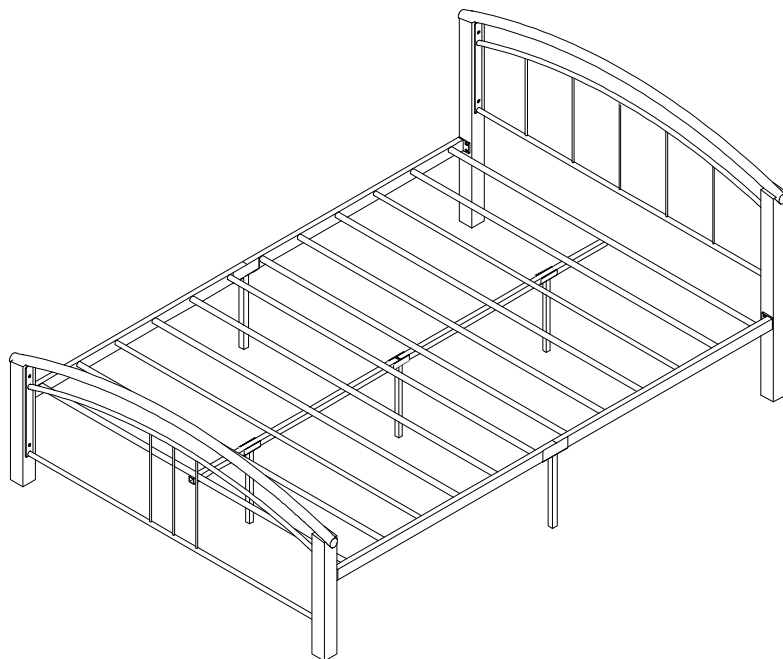


A*1PC




B*1PC

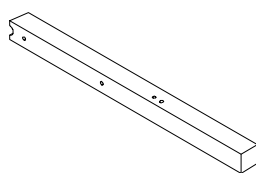


C*1PC

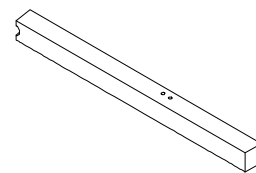


D*1PC

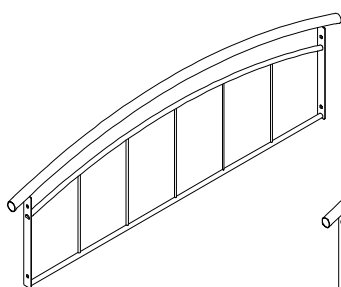


E*1PC

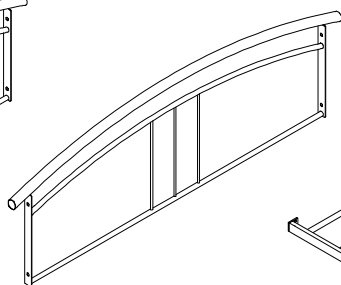

F*1PC

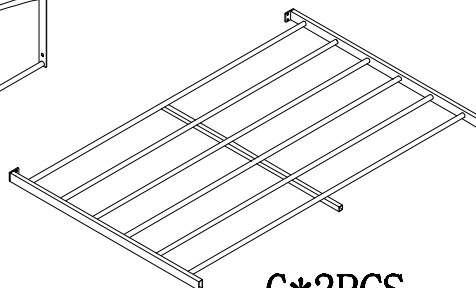

G*2PCS



H*2PCS



I*3PCS


J*16PCS



6. 35*19MM

P*1PC

K*4PCS



M8*50MM

Q*1PC

M*6PCS




6. 35*25MM


N*4PCS




M8



5M



4M



Note: Pls do not tighten all bolts until the bed is assembled completely

