

T-2820

**NOTE: THIS NOT RECOMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!**

IMPORTANT




FOR SERVICE PURPOSE PLEASE DO NOT REMOVE THE CUSTOMER SERVICE CODE LABEL ON THE MERCHANDISE. It IS ON THE UNDERSIDE OF BED. T/T BUNK BED

T/F BUNK BED

ATTENTION: DO not tighten all bolts until the bed is assembled completely.





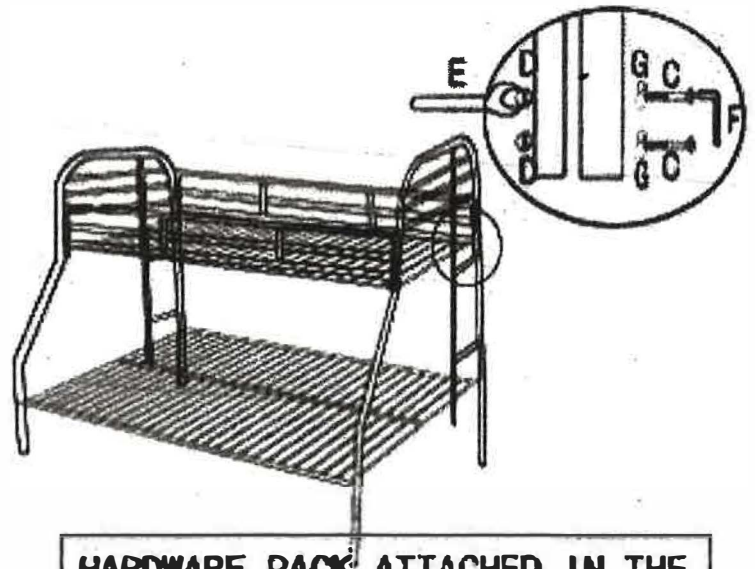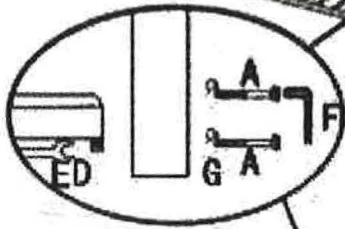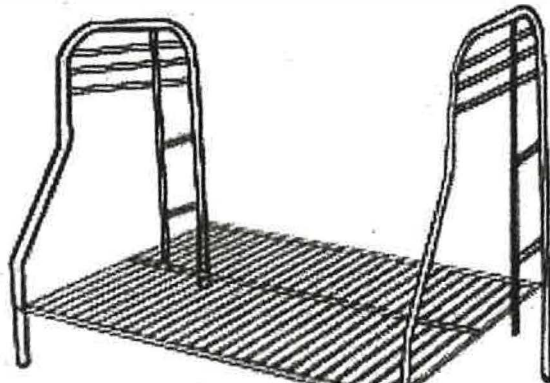






Hardware pack attached in the package in red plastic bag.

Assembly Instructions



HARDWARE PACK ATTACHED IN THE PACKAGE IN RED PLASTIC BAG

PARTS LIST

A		m8x60 Bolts	16 PCS
B		m8x30 Bolts	1 PCS
C		m8x85 Bolts	8 PCS
D		m8 Nuts	17 PCS
E		m8 Open wrench	1 PC
F		m8 Allen wrench	1 PC
G		WASHERS	24 PCS
H		m8x40 Bolts	1 PCS
I		20X20 leg	1 PC
J		20X40 leg	1 PC
K			1 PC