

ASSEMBLY INSTRUCTION


MODEL : T-1420 (Sofa 3RR)

Read this instruction carefully. Refer hardware and furniture parts list for guidance. Be sure all parts are complete before assembling. Place all furniture part on a clean and flat soft surface to prevent scratches. Refer steps provided as assembling guide.


PARTS LIST / LISTE DE PIÈCES		QTY/QTÉ
	DESCRIPTION	
	3RR	1 Pc
	Left Back Rest / dossier gauche	1 Pc
	Center Back Rest / dossier centre	1 Pc
	Right Back Rest / dossier droite	1 Pc
	Left Armrest / accoudoir gauche	1 Pc
	Right Armrest / accoudoir droite	1 Pc

HARDWARE LIST / LISTE DE QUINCAILLERIE


NO/N°	DESCRIPTION	QTY/QTÉ
A	M8 x 32mm Diameter Thread Clamping Star Knid Diamètre M8 x 32mm, Type d'étoile de serrage de fil.	4 Pcs
B	Stud M8 X 90MM Goujon M8 x 90mm	4 Pcs

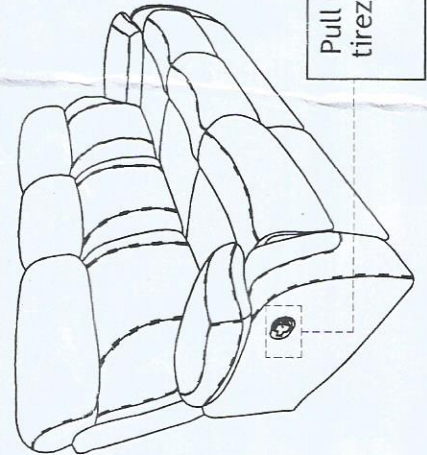


1

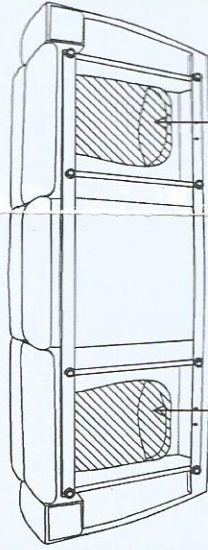



2

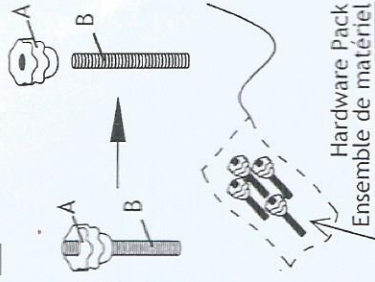



3

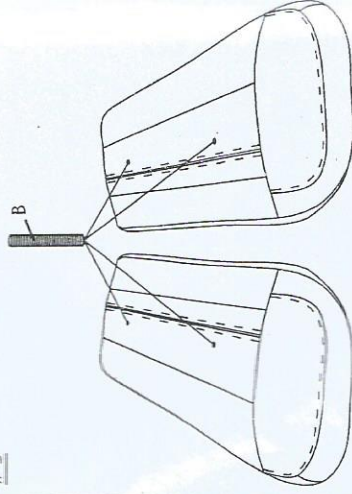


4

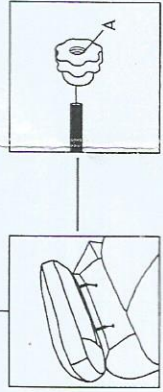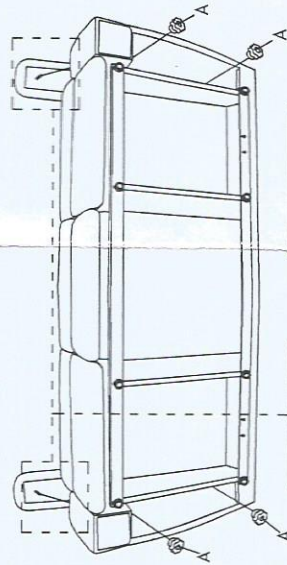


5

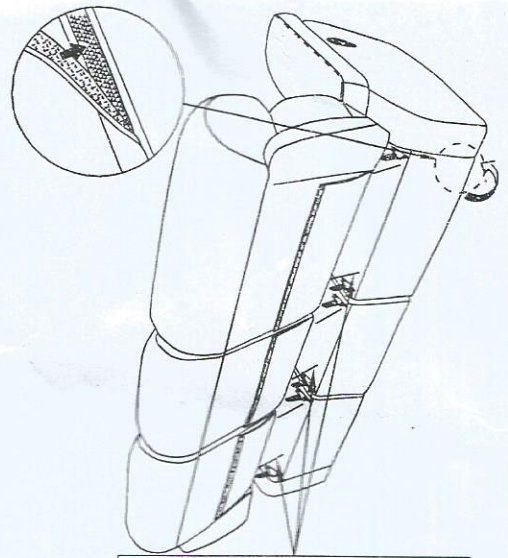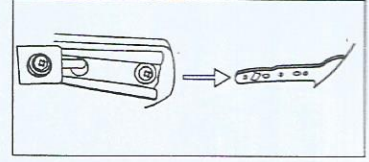

Upholstery Cushion Care

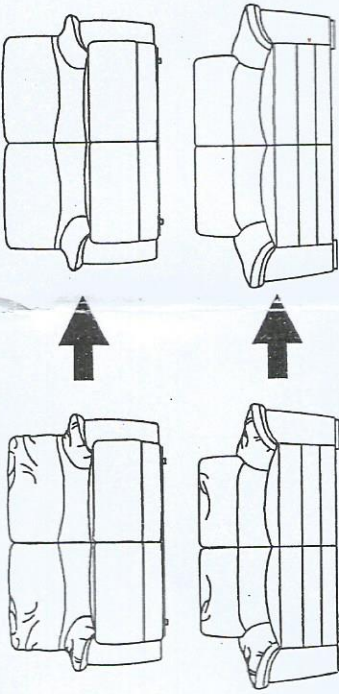

Regular plumping and fluffing is needed to better maintain shape.

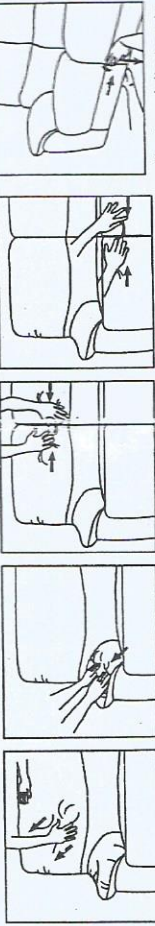

Start from the bottom and move to the top.

Start center towards outside border.

Push left & right back rest cushion to centre gently.

Push left & right seat cushion to centre gently.

Flapping and align to centre.