


Platform Bed
Assembly Instruction
Contains One Bed and Hardware






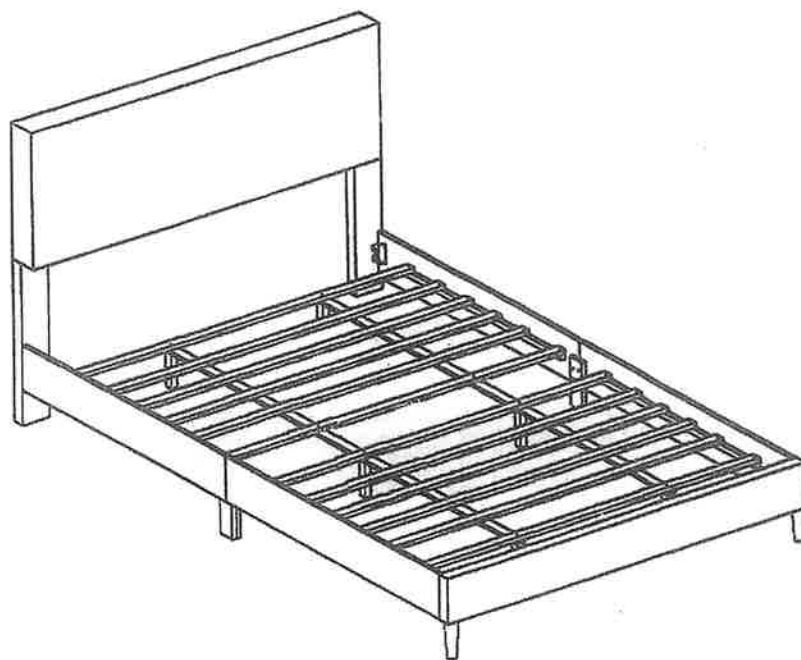


IMPORTANT NOTE:





Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware

TOOLS REQUIRED:
Phillips Screwdriver

PARTS LIST

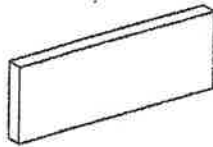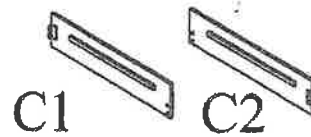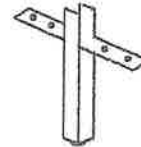
A. Headboard (1 pc)**B. Footboard (1 pc)****C. Side Rail (4 pcs)****D. Headboard Legs (2 pcs)****E. Footboard Legs (2 pcs)**
Cone Leg -**F. Side Rail Leg (2 pcs)****G. Wood Slat System (2 pcs)****H. Center Legs (4 pcs)****I. Center Leg (2 pcs)****J. Center Rail (2 pcs)****K. Center Rail (2 pcs)**

HARDWARE LIST


L. 20mm Bolt (12 pcs)**M. 30mm Bolt (8 pcs)****N. 50mm Bolt (8 pcs)****O. Large Hex Key (1 pc)****P. Small Hex Key (1 pc)****Q. Flat Washer (16 pcs)****R. 32mm Screw (32 pcs)****S. 20mm Screw (16 pcs)**

ASSEMBLY INSTRUCTIONS



STEP 1

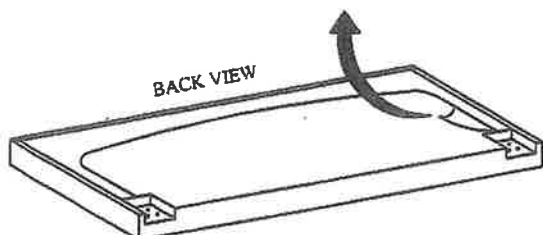

Untie the black fabric on the back of the headboard and remove the parts. Zip the black fabric closed after parts are removed.

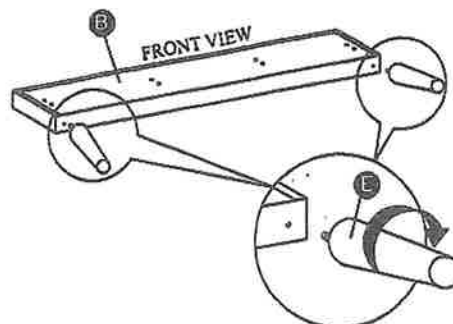


Attach the Footboard Legs (Part E) to the Footboard (Part B). Secure tightly.

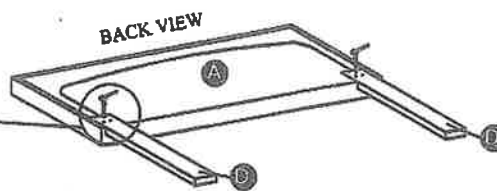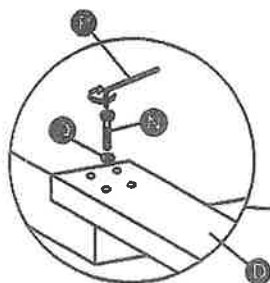


Attach Headboard Legs (Part D) to the Headboard (Part A) using four 50mm Bolts (Part N) and four Flat Washers (Part Q) per leg. Secure tightly using Small Hex Key (Part P).

STEP 2

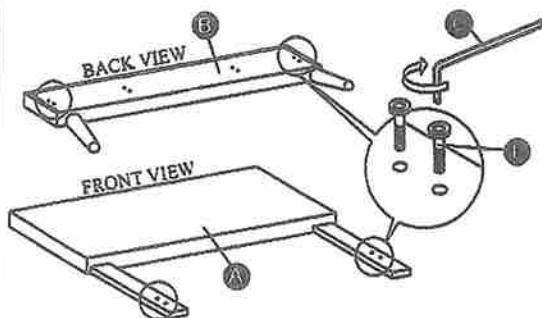

Attach the twelve 20mm Bolts (Part L) to the headboard legs and footboard using the Large Hex Key (Part O). Do not tighten.


STEP 3

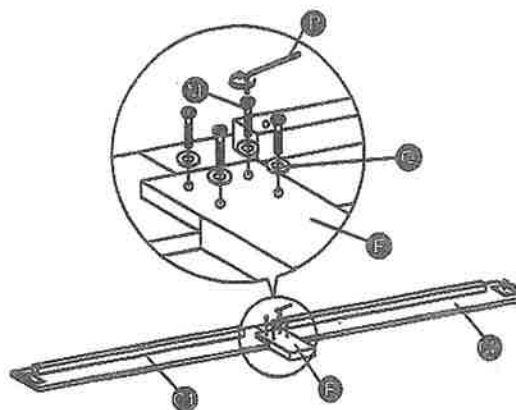

Attach the Side Rails (Parts C1 & C2) to Side Rail Leg (Part F) using four 30mm Bolts (Part M) and four Flat Washers (Part Q). Secure tightly using Small Hex Key (Part P). Repeat this process for the other Side Rail.


ASSEMBLY INSTRUCTIONS

STEP 4

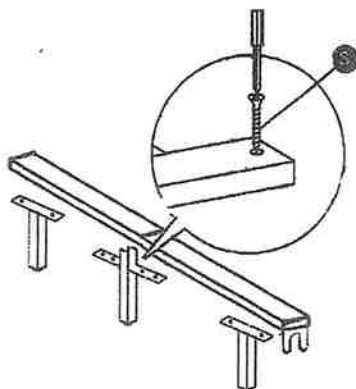


Attach the Center Legs (Parts H & I) to the Metal Center Rail (Part J & K) using 20mm screw (Part S) and Philips Head Screwdriver (Not provided) to tightens as shown in the figure. Repeat this process for other metal center rail.

STEP 5

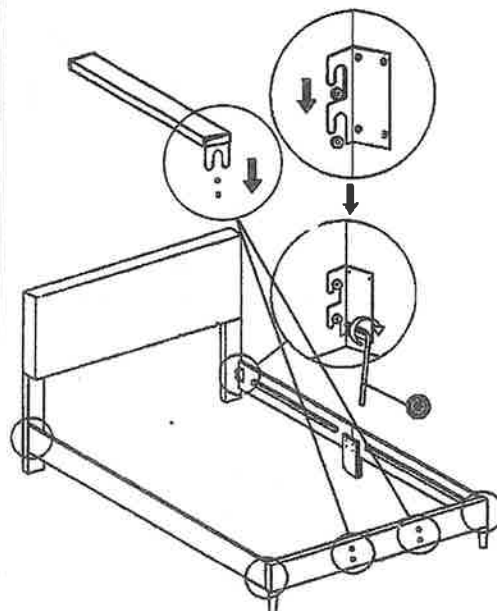

Attach the Side Rails and the Metal Center Rail to the Headboard (Part A) and Footboard (Part B) by sliding the brackets onto the bolts on the Headboard (Part A) and Footboard (Part B). Secure tightly using Large Hex Key (Part O).

STEP 6

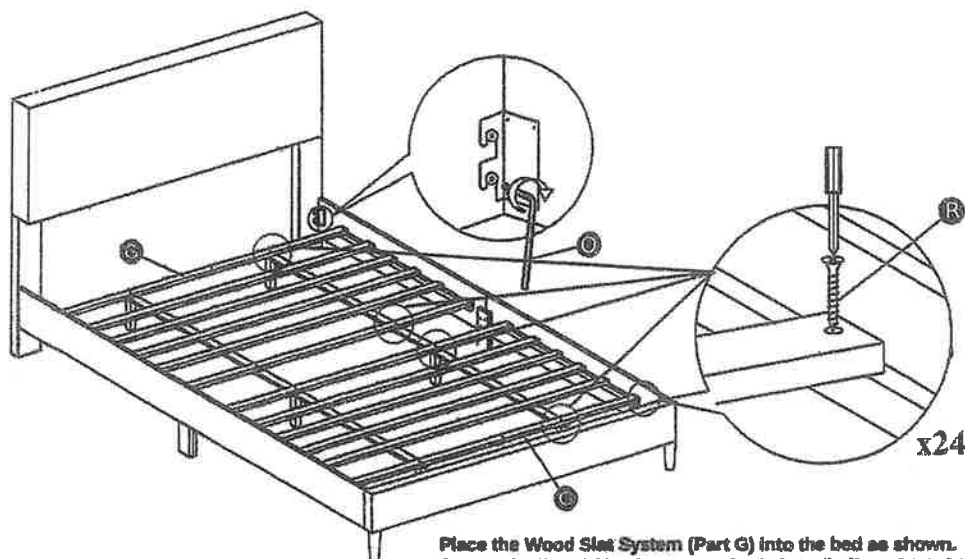

Place the Wood Slat System (Part G) into the bed as shown. Secure the Wood Slat System to the Side Rails (Part C1 & C2) using 24 Screws 32mm (Part R) and a Philips Head Screwdriver (Not provided). Secure the metal center rail to the wood slat system's center hole (Part G) using 4 screws 32mm (Part R) per metal support. Your bed is now set up and ready for use.