

ROSEMOUNT
CANADIAN MADE FURNITURE


ASSEMBLY INSTRUCTIONS

R863 OTTOMAN

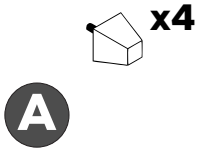


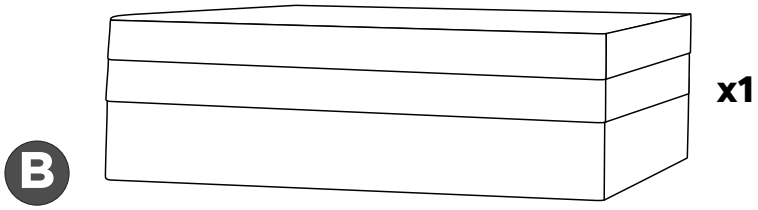

1.

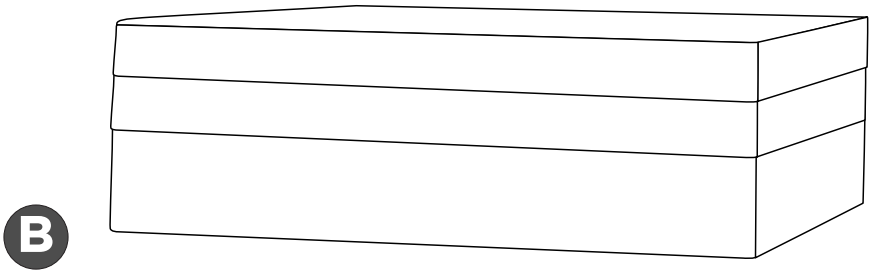

2.

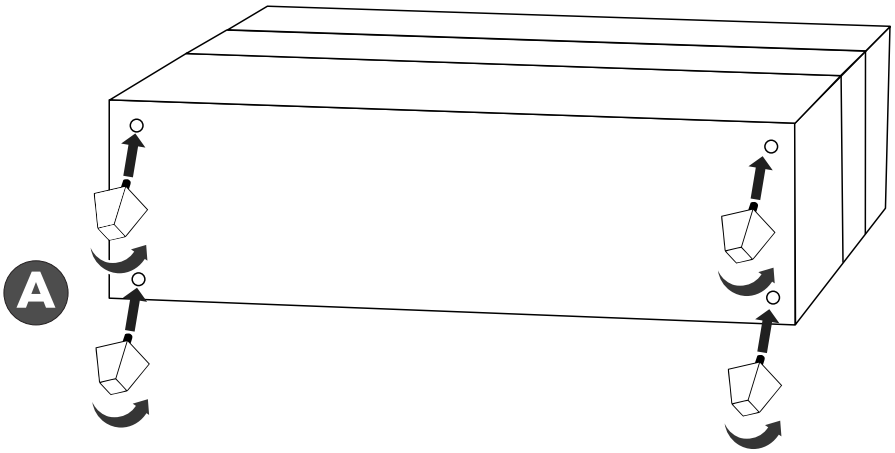

3.

