

ROSEMOUNT
CANADIAN MADE FURNITURE

ASSEMBLY INSTRUCTIONS

R864 OTTOMAN




A

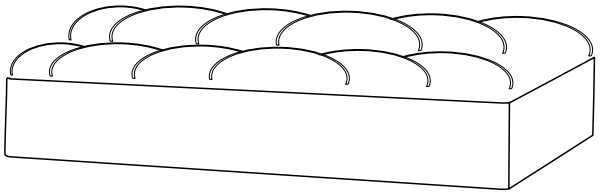


B

1.

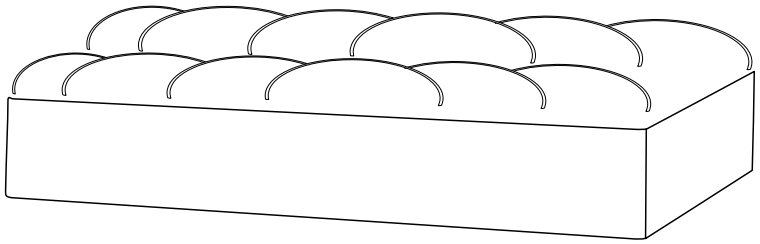

2.

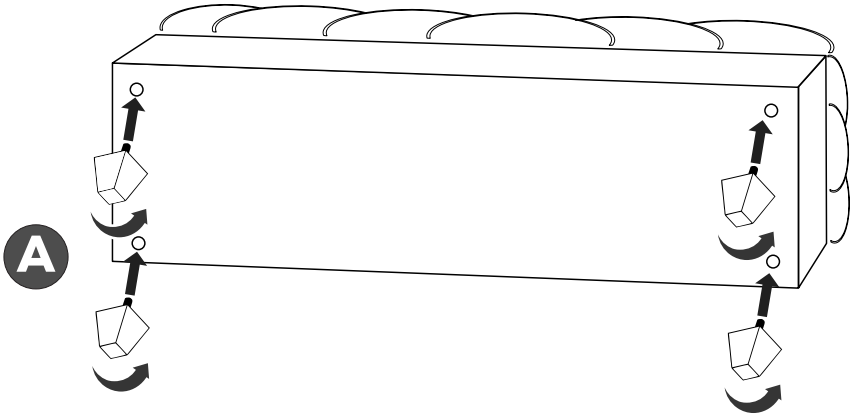

3.

