
ROSEMOUNT
CANADIAN MADE FURNITURE


ASSEMBLY INSTRUCTIONS

R896 OTTOMAN

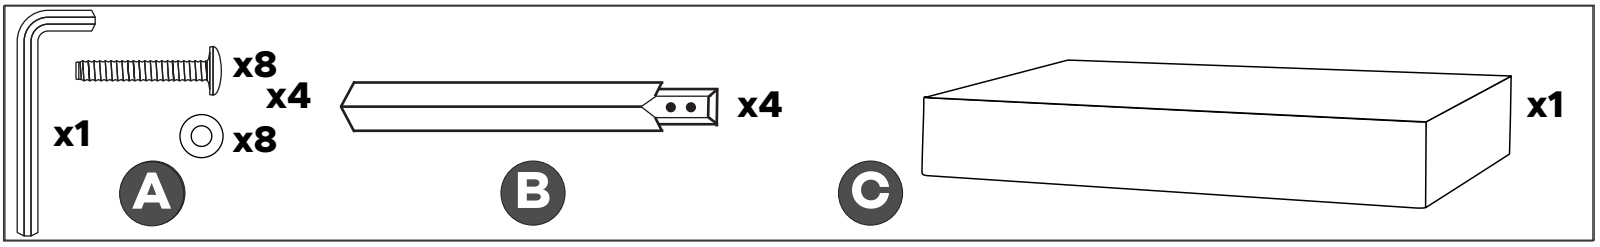



1.



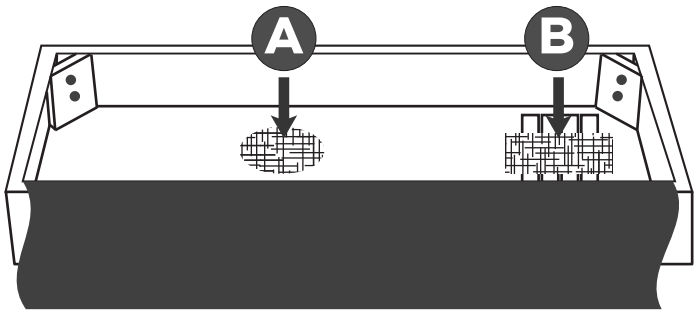

2.

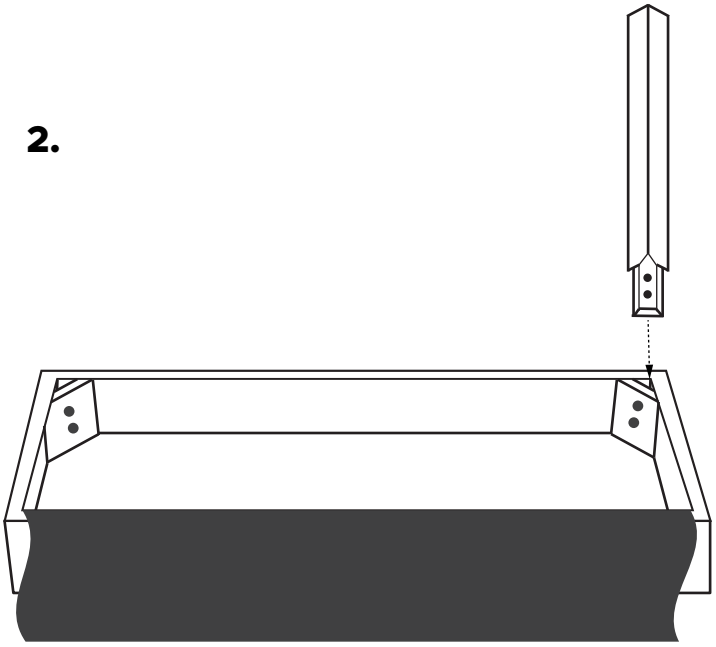

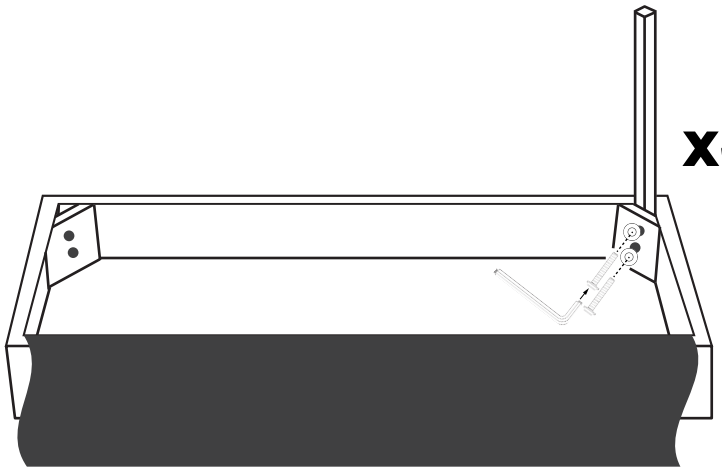

3.

